



Coil Springs- Tapered End Identification

Brand	Supreme	Product	Coil Springs	Date	February 2021
Part Number(s)	Various				

Some Mevotech Supreme replacement coil springs are manufactured with a non-tapered square end. Depending on vehicle specification at factory, the original equipment coil spring may feature a tapered or non-tapered square end.

It is important to note that Supreme coil springs with a non-tapered square end are a direct fit replacement for original equipment tapered square end coil springs.

To successfully install Supreme coil springs, it is important to adhere to the following:

- Discard old nuts and bolts. Do not reuse hardware.
- Only use a calibrated torque wrench for final fastening.
- Inspect mating components for damage. Replace all damaged or out of specification mating components.
- Remove all rust, burrs and corrosion from mating components.
- Locate the non-tapered square end on the replacement coil spring. This is painted white to aid in identification. This end must be installed UP. **See Figure 1.**

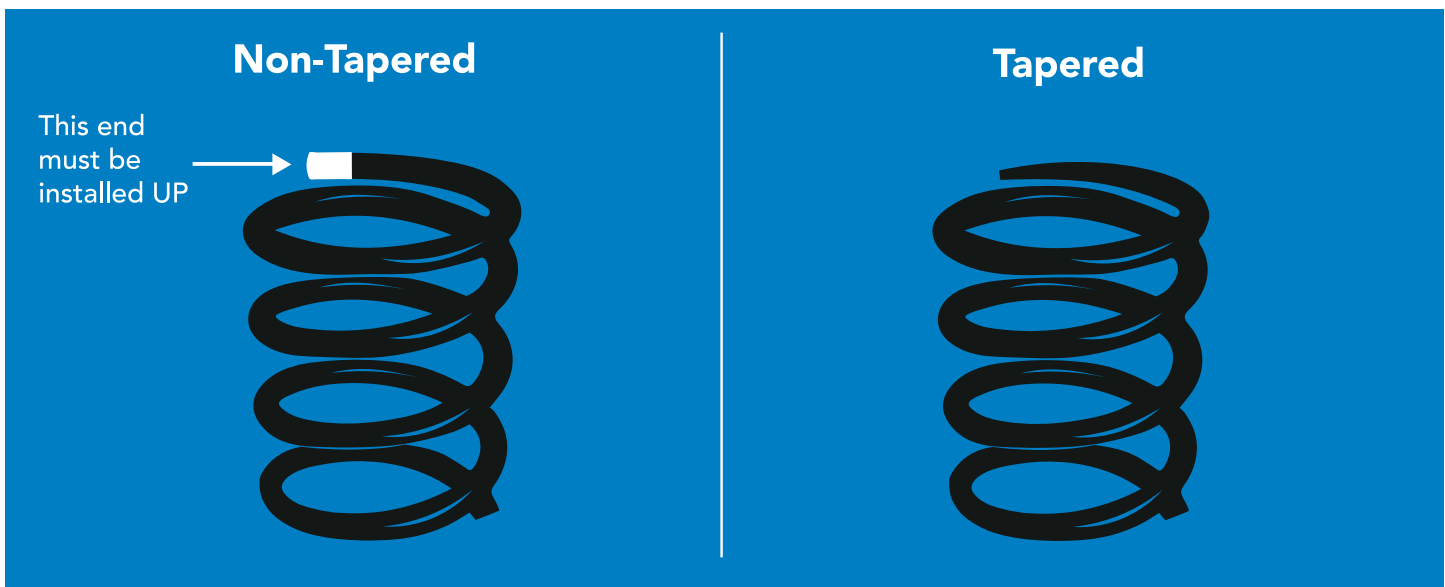


Figure 1

