



Correct Installation Orientation: 2010-2006 Hummer H3 Front Lower Ball Joint

Brand	Supreme	Product	Ball Joint	Date	November 2022
Part Number(s)	MS50529				

To ensure adequate access to the grease fitting, the below noted ball joint must be pressed-in using the correct orientation.

Part Number:
MS50529

For a successful repair outcome, adhere to the following:

- Before installation of ball joint, ensure all mating surfaces are clear of rust, debris and burrs.
- Verify press-in diameters and stud tolerances, including on steering knuckle side. Inspect mating surfaces for cracks, deformation and or an out of round condition. Replace all damaged or out-of-specification mating components.
- The ball joint must be installed with the grease fitting in parallel with the front lower control arm stop out tab. **See Figure 1.**
- Before press-in, it is recommended to create an index mark on both the control arm and ball joint housing using a suitable implement, such as a grease pencil. This will assist in attaining correct orientation during press-in.

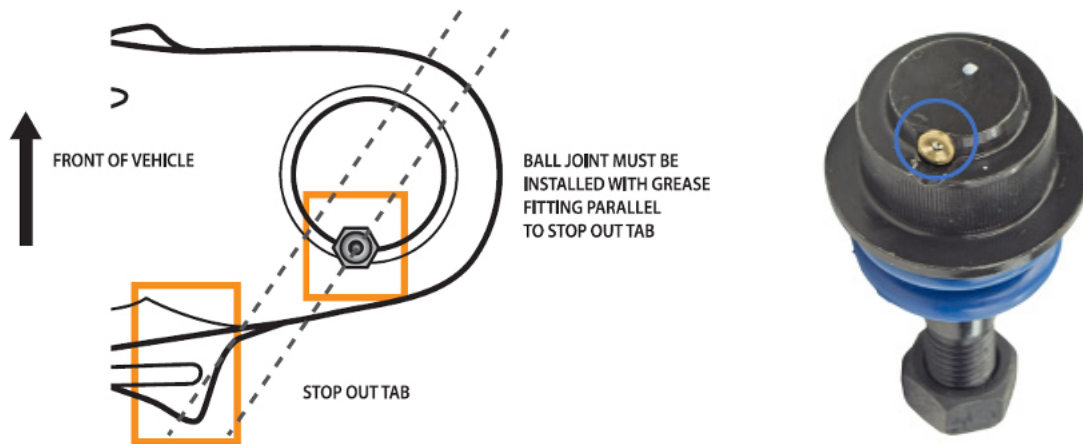


Figure 1. To ensure adequate clearance between components and accessibility for future relubrication service, ball joint must be installed with grease fitting parallel to front lower control arm stop out tab

Always ensure to refer to the factory service manual for correct diagnostic procedures, component removal and installation methods and fastening torque values and procedures where applicable. Only use a calibrated torque wrench for final fastening.

