




## Front Stabilizer Bar Link Installation: 2020-2014 Tesla Model S AWD

<b>Brand</b>	Supreme	<b>Product</b>	Stabilizer Bar Link	<b>Date</b>	July 2021
<b>Part Number(s)</b>	MS95807				

### Installation Notes: General


- Discard old nuts and bolts. Do not reuse hardware.
- Inspect all mating surfaces and replace mating components if damaged or out of specification conditions are found.
- Remove all rust, burrs and other contaminants from the steering knuckle bore and other mating surfaces.
- If the ball stud is broken, bent or loose, the steering knuckle must be inspected and replaced if there is deformation, an out-of-round condition or damage.
- Use only a calibrated torque wrench for all fastening procedures at correct preloaded vehicle ride height.
- If vehicle is equipped with air suspension, deflate both front air bags before commencing repair.

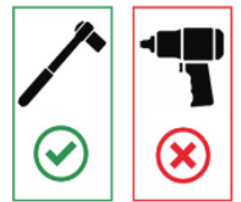

### Installation Notes: Stabilizer Bar Link to Steering Knuckle and Stabilizer Bar

- See **Figure 1** for stabilizer bar link to steering knuckle and stabilizer bar fastening values

Figure 1.

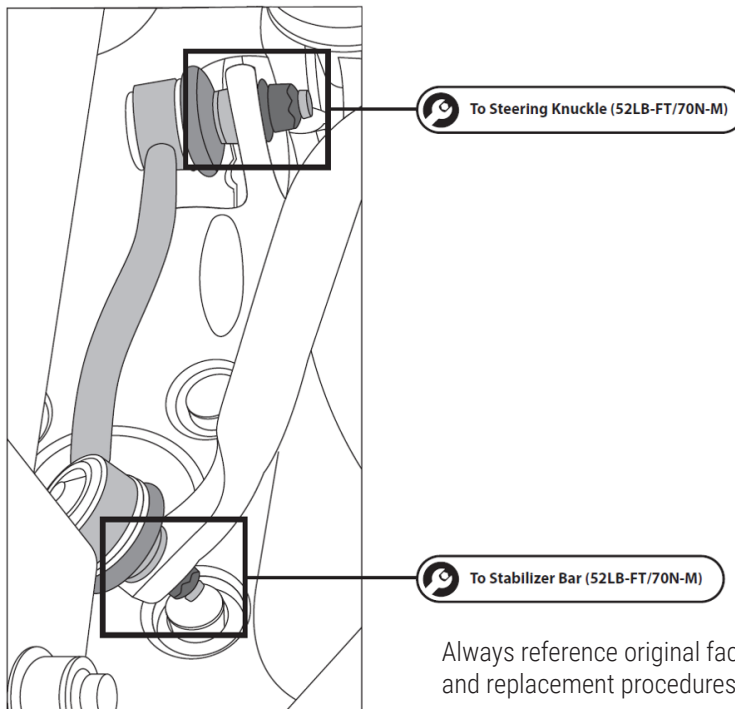

Always reference original factory service manual for proper diagnostic, removal and replacement procedures, as well as all related specifications and values.

