MEVOTECH INSIDER
Service Tips and Best Practices

2011-2016 Ford F-250 and F-350 Super Duty Drag Link Identification

Brand	Supreme	Product	Drag Links	Date	March 2020
Part Number(s)	MS40973-MS40974				

When replacing drag links for the 2011-2016 Ford F-250 Super Duty and 2011-2016 Ford F-350 Super Duty, it is important to verify the frame option.

The pickup uses the wider standard frame, where rails are 92.3cm-95.8cm (36.6in-37.7in) apart and there exists a "hump" over the rear axle. (Figure 1)

The chassis cab uses the narrower commercial frame, where rails are 86.6cm-86.9 (34.1in-34.2in) apart and a hump does not exist (rails are flat) over the rear axle. (Figure 2)

Once the frame option is confirmed, the correct drag link can be fitted.



Figure 1: 2016 Ford F-250 Super Duty Pickup




Figure 2: 2015 Ford F-350 Super Duty Chassis Cab

MS40973: 94cm (37in) From Stud Center to End



Application	Frame Option	PN# Required
2011-2016 Ford F-250 Super Duty Chassis Cab	Commercial	MS40973
2011-2016 Ford F-350 Super Duty Chassis Cab	Commercial	MS40973

MS40974: 87.6cm (34.5in) From Stud Center to End

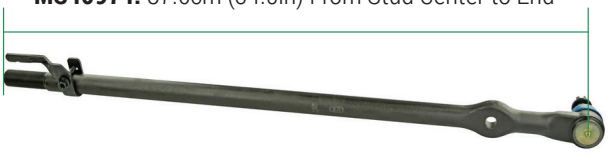

Application	Frame Option	PN# Required
2011-2016 Ford F-250 Super Duty Pickup	Standard	MS40974
2011-2016 Ford F-350 Super Duty Pickup	Standard	MS40974

WE SUPPORT ASE CERTIFICATION

DISCLAIMER: The information in this communication is intended for use only by skilled technicians who have the proper tools, equipment and training to correctly and safely maintain vehicles. Refer to original manufacturers service manual for proper torque specifications and removal/installation procedures. All content in the publication is provided as-is and without warranty. All care has been taken to ensure the accuracy of the information presented. The publisher assumes no responsibility or liability for any loss or damage, direct, indirect or consequential, arising from the use of the information contained herein.