MEVOTECH

MEVOTECH INSIDER

Service Tips and Best Practices

Coil Springs- Tapered End Identification

Brand	Supreme	Product	Coil Springs	Date	February 2021
Part Number(s)	Various				

Some Mevotech Supreme replacement coil springs are manufactured with a non-tapered square end. Depending on vehicle specification at factory, the original equipment coil spring may feature a tapered or non-tapered square end.

It is important to note that Supreme coil springs with a non-tapered square end are a direct fit replacement for original equipment tapered square end coil springs.

To successfully install Supreme coil springs, it is important to adhere to the following:

- Discard old nuts and bolts. Do not reuse hardware.
- Only use a calibrated torque wrench for final fastening.
- Inspect mating components for damage. Replace all damaged or out of specification mating components.
- Remove all rust, burrs and corrosion from mating components.
- Locate the non-tapered square end on the replacement coil spring. This is painted white to aid in identification. This end must be installed UP. **See Figure 1.**

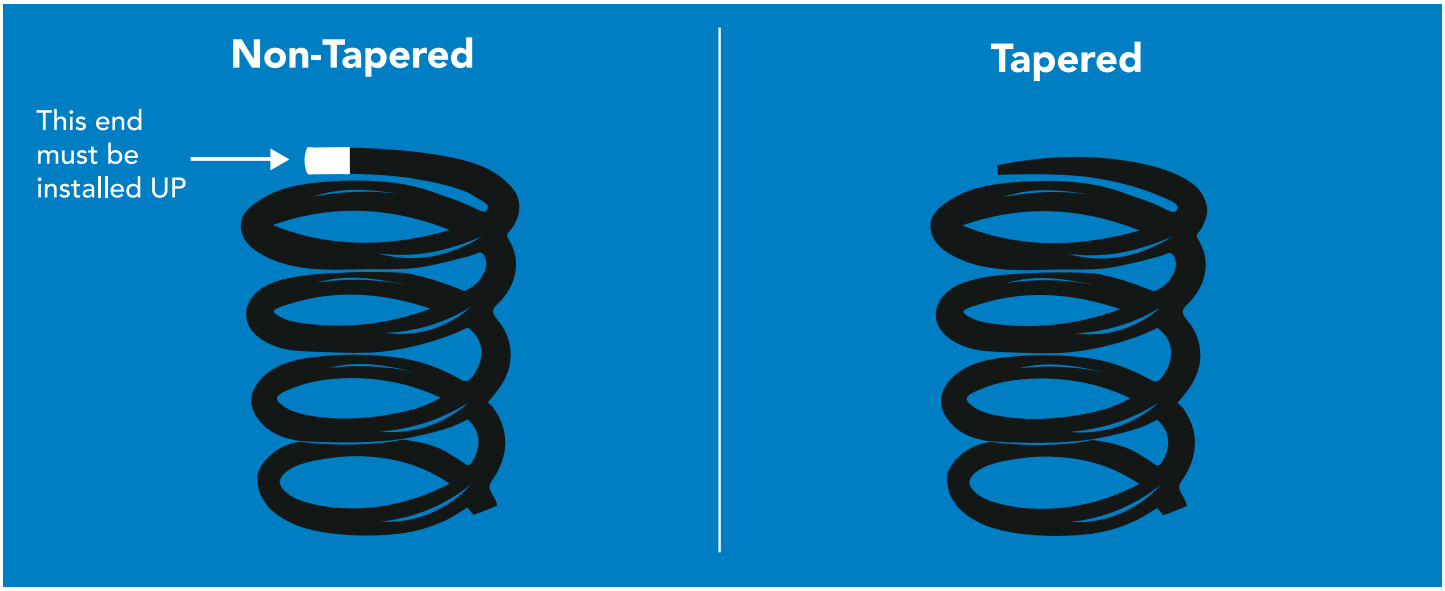


Figure 1

WE SUPPORT ASE CERTIFICATION

DISCLAIMER: The information in this communication is intended for use only by skilled technicians who have the proper tools, equipment and training to correctly and safely maintain vehicles. Refer to original manufacturers service manual for proper torque specifications and removal/installation procedures. All content in the publication is provided as-is and without warranty. All care has been taken to ensure the accuracy of the information presented. The publisher assumes no responsibility or liability for any loss or damage, direct, indirect or consequential, arising from the use of the information contained herein.