MEVOTECH

MEVOTECH INSIDER

Service Tips and Best Practices

Front Stabilizer Bar Link Installation: 2017-2012 Tesla Model S RWD

Brand	Supreme	Product	Stabilizer Bar Link	Date	July 2021
Part Number(s)	MS95808/MS95809				

Installation Notes: General




- Discard old nuts and bolts. Do not reuse hardware.
- Inspect all mating surfaces and replace mating components if damaged or out of specification conditions are found.
- Remove all rust, burrs and other contaminants from the steering knuckle bore and other mating surfaces.
- If the ball stud is broken, bent or loose, the steering knuckle must be inspected and replaced if there is deformation, an out-of-round condition or damage.
- Use only a calibrated torque wrench for all fastening procedures at correct preloaded vehicle ride height.
- If vehicle is equipped with air suspension, deflate both front air bags before commencing repair.

Installation Notes: Stabilizer Bar Link to Steering Knuckle and Stabilizer Bar

- **See Figure 1** for stabilizer bar link to steering knuckle and stabilizer bar fastening values.

Figure 1.

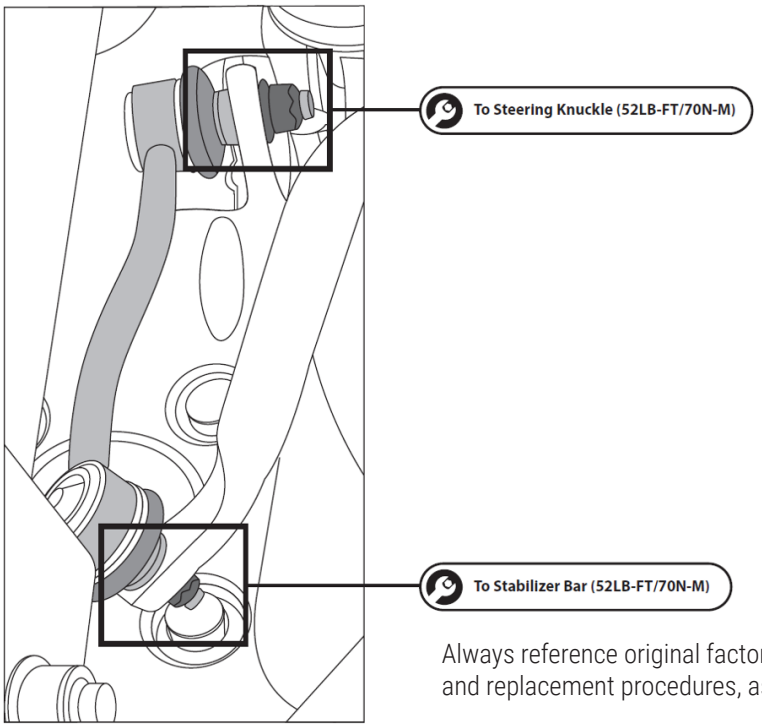

Always reference original factory service manual for proper diagnostic, removal and replacement procedures, as well as all related specifications and values.

WE SUPPORT ASE CERTIFICATION

DISCLAIMER: The information in this communication is intended for use only by skilled technicians who have the proper tools, equipment and training to correctly and safely maintain vehicles. Refer to original manufacturers service manual for proper torque specifications and removal/installation procedures. All content in the publication is provided as-is and without warranty. All care has been taken to ensure the accuracy of the information presented. The publisher assumes no responsibility or liability for any loss or damage, direct, indirect or consequential, arising from the use of the information contained herein.