MEVOTECH

MEVOTECH INSIDER

Service Tips and Best Practices

Front Upper Control Arm Installation - 2020-2012 Tesla Model S

Brand	Supreme	Product	Control Arms	Date	July 2021
Part Number(s)	CMS95129/CMS95130				

Installation Notes: General



- Discard old nuts and bolts. Do not reuse hardware.
- Inspect all mating surfaces and replace mating components if damaged or out of specification conditions are found.
- Remove all rust, burrs and other contaminants from the steering knuckle bore and other mating surfaces.
- Refer to Mevotech Insider "Best Practices – Pinch Bolts and Steering Knuckles" (MI-21-098-04-01), for an optimal repair outcome when removing and fitting the upper steering knuckle pinch bolt.
- Use only a calibrated torque wrench for all fastening procedures at correct preloaded vehicle ride height.
- If vehicle is equipped with air suspension, deflate both front air bags before commencing repair.
- Perform 4-wheel vehicle alignment after repair.

Installation Notes: Control Arm to Steering Knuckle

- **See Figure 1** for control arm to steering knuckle and frame fastening values.

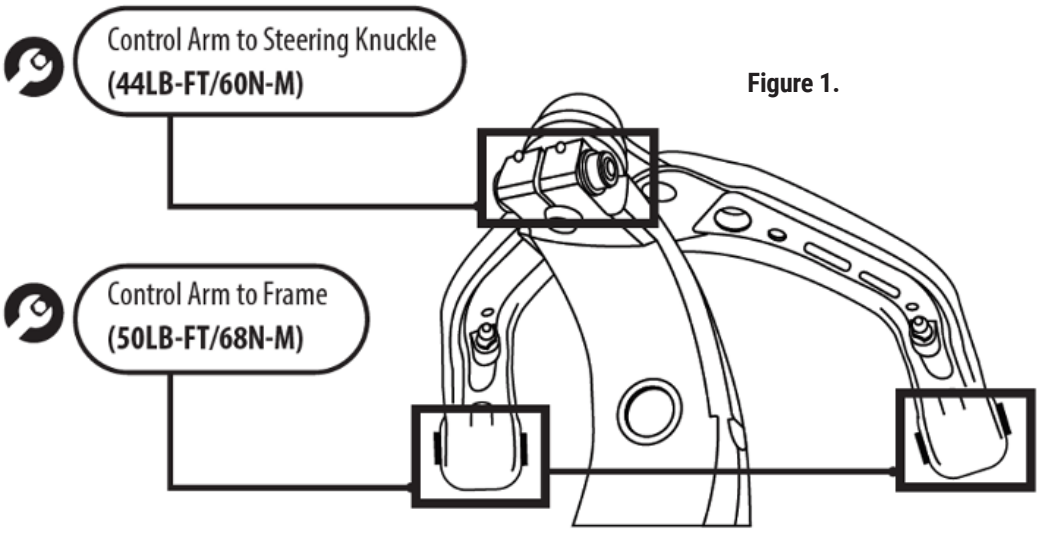


Figure 1.

Always reference original factory service manual for proper diagnostic, removal and replacement procedures, as well as all related specifications and values.

WE SUPPORT ASE CERTIFICATION

DISCLAIMER: The information in this communication is intended for use only by skilled technicians who have the proper tools, equipment and training to correctly and safely maintain vehicles. Refer to original manufacturers service manual for proper torque specifications and removal/installation procedures. All content in the publication is provided as-is and without warranty. All care has been taken to ensure the accuracy of the information presented. The publisher assumes no responsibility or liability for any loss or damage, direct, indirect or consequential, arising from the use of the information contained herein.